

# SB35-G2000 Series SBC industrial Motherboard



## **User Manual**

# 3.5" Industrial Single Board Computer With AMD Processor

(3<sup>st</sup> Edition 3/01/2013)

All information is subject to change without notice.

Approved by	Checked by	Prepared by
Mil	Jacky	Frank

## **RECORD OF REVISION**

Version	Date	Page	Old Description	New Description	Remark
V1.0	2013.Feb.1	all		Initial Release	
V1.1 2013.Feb.20	11		Add Location of Connectors and Jumpers		
	17	CN5 Pin4: +5V	+12V		
V1.2	2013.Mar.01	4		Packing List add Heat sink	

## Acknowledgments

All other products' name or trademarks are properties of their respective owners.

AMI is a trademark of American Megatrends Inc.

ITE is a trademark of Integrated Technology Express Inc.

AMD is a trademark of AMD ® Corporation.

Microsoft Windows is a registered trademark of Microsoft Corp.

IBM, PC/AT, PS/2, and VGA are trademarks of International Business Machines Corporation.

Sound Blaster is a trademark of Creative Labs ,Inc.

Please be notified that all other products' name or trademarks not be mentioned above are properties of their respective owners.

## **Packing List**

Before installation, please ensure the following items have been shipped:

- 1 x SB35-G200X
- 1 x VGA cable
- 1 x SATA Power cable
- 1 x SATA Signal cable
- 2 x RS232 cable
- 1 x USB cable(2 Connecter)
- 1 x DVD-ROM for manual (in PDF format) and drivers
- 1 x Heat sink (G2002 \ G2003 Type w/o Fan---25X25X25 mm G2004 \ G2006 Type with Fan---24.5X25X25 mm)

If any of these items should be missing or damaged, please contact your distributor or sales representative immediately.

## **Ordering Information**

#### **Model Number Description**

#### SB35-G2002-01 (Fanless Design)

AMD T16R (615MHz) APU with GPU HD 6250, 3.5" SBC Board, Mini Card, 2GbE, 6COM, 8-bit GPIO, 6USB, VGA, HDMI, CFast, 12VDC

#### **SB35-G2003-01** (Fanless Design)

AMD T40R (1 GHz) APU with GPU HD 6250, 3.5" SBC Board, Mini Card, 2GbE, 6COM, 8-bit GPIO, 6USB, VGA, HDMI, CFast, 12VDC

#### SB35-G2004-01

AMD T40N (1 GHz) APU with GPU HD 6290, 3.5" SBC Board, Mini Card, 2GbE, 6COM, 8-bit GPIO, 6USB, VGA, HDMI, CFast, 12VDC

#### SB35-G2006-01

AMD T56N (1.65GHz) APU with GPU HD 6320, 3.5" SBC Board, Mini Card, 2GbE, 6COM, 8-bit GPIO, 6USB, VGA, HDMI, CFast, 12VDC

## **Optional Accessories**

- 2.5" SATA Hard Disk Drive
- CFast Memory Card
- ADAPTER,12V,7.0A,84W.
- Heat Sink w/o Fan( For G2002 \ G2003)
- Heat Sink with Fan( For G2004 \ G2006)
- Audio Cable(Line in \ Line out \ MIC)
- SATA Power cable
- SATA Signal cable
- RS232 cable
- USB cable(2 Connecter)

## Safety & Warranty

- 1. Read these safety instructions carefully.
- 2. Keep this user's manual for later reference.
- 3. For pluggable equipment, the power outlet must be installed near the equipment and must be easily accessible.
- 4. Keep this equipment away from humidity.
- 5. Put this equipment on a firm surface during installation. Dropping it or letting it fall could cause damage.
- 6. Make sure the voltage of the power source is correct before connecting the equipment to the power outlet.
- 7. Position the power cord so that people cannot step on it. Do not place anything over the power cord.
- 8. All cautions and warnings on the equipment should be noted.
- 9. If the equipment is not used for a long time, disconnect it from the power source to avoid damage by transient over-voltage.
- 10. Never pour any liquid into an opening. This could cause fire or electrical shock.
- 11. If any of the following situations arises, get the equipment checked by service personnel:
  - a. The power cord or plug is damaged.
  - b. Liquid has penetrated into the equipment.
  - c. The equipment has been exposed to moisture.
  - d. The equipment does not work well, or you cannot get it to work according to the user's manual.
  - e. The equipment has been dropped and damaged.
  - f. The equipment has obvious signs of breakage.
- 12. DO NOT LEAVE THIS EQUIPMENT IN AN ENVIRONMENT WHERE THE STORAGE TEMPERATURE IS BELOW -20°C (-4°F) OR ABOVE 70°C (158°F). IT MAY DAMAGE THE EQUIPMENT.

## **CONTENTS**

RECORD OF REVISION	2
1.0 INTRODUCTION	7
2.0 HARDWARE INSTALLATION	9
A A AMI DIOC OFFUR	0.4
3.0_AMI BIOS SETUP	21
4 0 DRIVER INSTALL ATION	28

#### 1.0 INTRODUCTION

## 1.1 About SB35-G2000 Single Board Computer With AMD Processor

SB35-G2000 based on AMD Fusion technology delivers a complete, full-feature embedded platform and incorporate the new low-power, x86 CPU with a world-class DirectX 11-capable GPU on a single piece of silicon. It is the perfect solution for application that require low power and significant graphic performance in a small form factor. The SB35-G2000 integrate high performance solutions, support system memory DDR3 up to 4GB, three types of storage device are considered, SATA interface, mSATA and CFast. High speed internet connectivity, it offers two ports of Gigabit Ethernet. And rich IO interface, 6 COM ports, 6 USB and 8-bit digital IO. SB35-G2000 provide three types of display interface, VGA, HDMI and dual 24-bit LVDS, as well as it supports dual display feature through VGA+HDMI, VGA+LVDS or HDMI+LVDS.SB35-G2000 is a great choice for customers who used embedded board for high performance, multi-media and small form factor. It is ideal for applications such as industrial control,digital signage, transportation, POS, information Kiosk, medical, casino gaming and factory automation.

#### **1.2 FEATURES**

- Embedded AMD G-series Dual Core/Single CoreProcessor
- Low Power Consumption
- System Memory Support DDR3 up to 4GB.
- Multi Display Dual 24-bit LVDS, HDMI or VGA
- High Resolution Display HDMI up to 1920x1080, VGA1920x1200 (T56N up to 2560X1600)
- Support High Graphic Performance DirectX 11, 2D/3D Acceleration
- Support two GbE
- Rich I/O Interface 6 COM, 2 SATA, 6 USB, 8-bit GPIO
- Support 3 Types Storage Interface, SATA, mSATA, CFast
- Audio Interface Line-in, Line-out, MIC, Speaker Out
- Extended Interface Mini Card Socket
- 12V DC Input
- Wide Temperature Operation
- Dimension 146x101.6 mm (5.75" x 4")

#### 1.3 SPECIFICATIONS:

#### **System**

	Model Name	APU	GPU
	SB35-G2006	T56N (1.65GHz) Dual Core	HD6320
Processor	SB35-G2004	T40N (1.0GHz) Dual Core	HD6290
	SB35-G2003	T40R (1.0GHz) Single Core	HD6250
	SB35-G2002	T16R (615MHz) Single Core	HD6250

Chip Set AMD A55E

System Memory 204-pin SODIMM x1, Max. 4GB DDR3-1333 (DDR3-1333 for T56N)

Speed: 10/100/1000 Base-TX,

Ethernet Controller: x2 Intel® 82583V

Connector: x2 RJ45 on rear IO side

Storage SATA (3.0G/s) x2 ,CFast x1

mSATA optional (support either mSATA or full size mini card) x1

Audio Chipset Realtek ALC269

Line-out, Line-in, MIC, Speaker out

AMD G-series GPU

Supports Hardware DirectX11

Display HDMI display resolution up to 1920x1080

VGA display resolution up to 1920X1200 (T56N up to 2560x1600)

LVDS support dual channel 24-bit

Expansion Full size mini card x1

IO Chipset Fintek F81866AD

Rear IO Interface RJ45 GbE x2 ,USB 2.0 x2 ,COM (RS232/422/485) x1 ,HDMI x1

On Board IO Interface

USB x4, COM (RS232) x5, VGA x1, LVDS Dual 24-bit x1

Audio Line-in, Line-out, MIC, 8-bit GPIO, Speaker out

BIOS AMI Plug & Play BIOS

Operation Temperature -20°C ~ 60°C

Environment Storage Temperature -30°C ~ 80°C

Operation Humidity 0~90%, non-condensing


Power Input Single DC 12V

Board Size 5.75" x 4" (146mm x 101.6mm)


## 2.0 HARDWARE INSTALLATION

## 2.1 General System Information


Top View

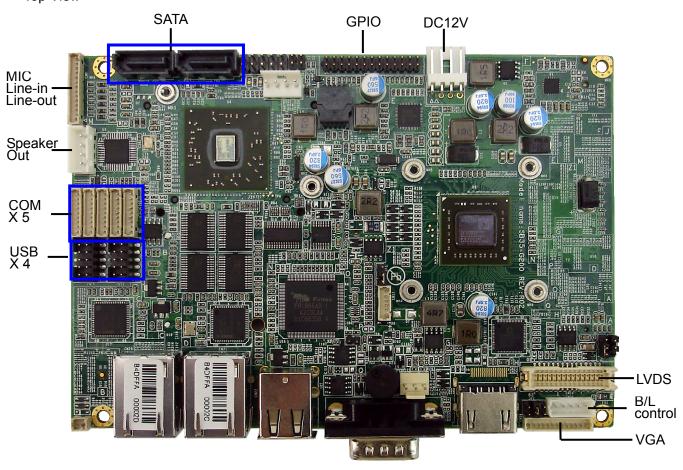

Rear IO View

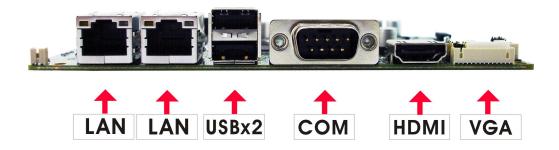


## Bottom Side View

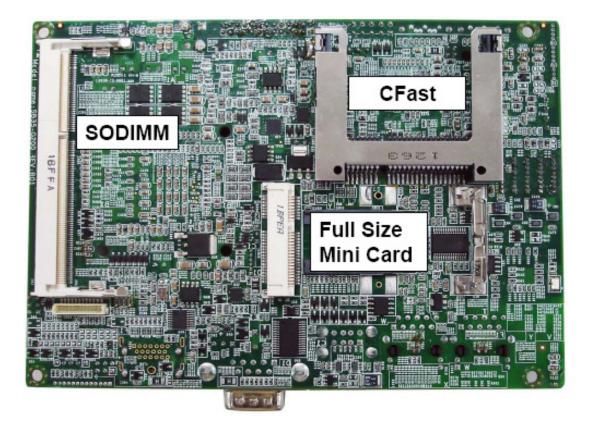


#### 2.2 Location of Connectors and Jumpers

#### Component Side

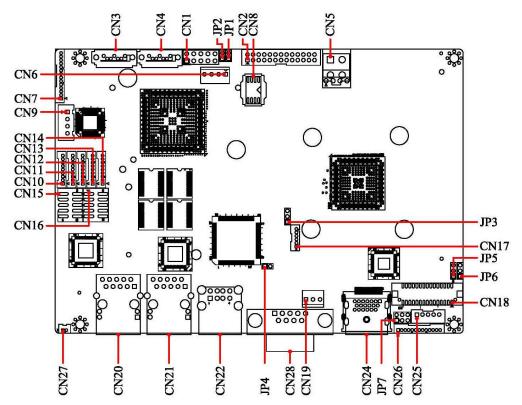


# **Component Side**

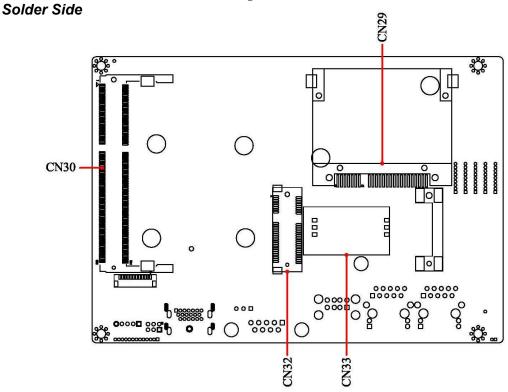


Solder Side

#### 2.3 Mechanical Drawing


#### **Component Side**

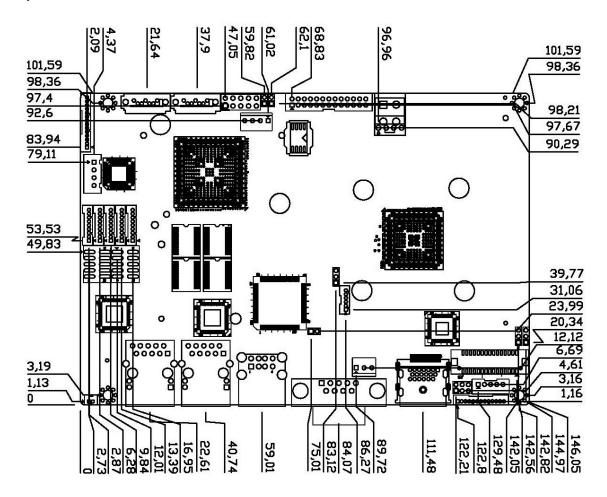

## **Component Side**

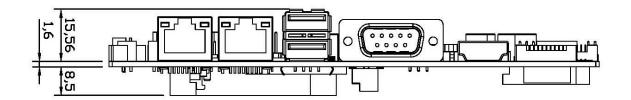

### Solder Side

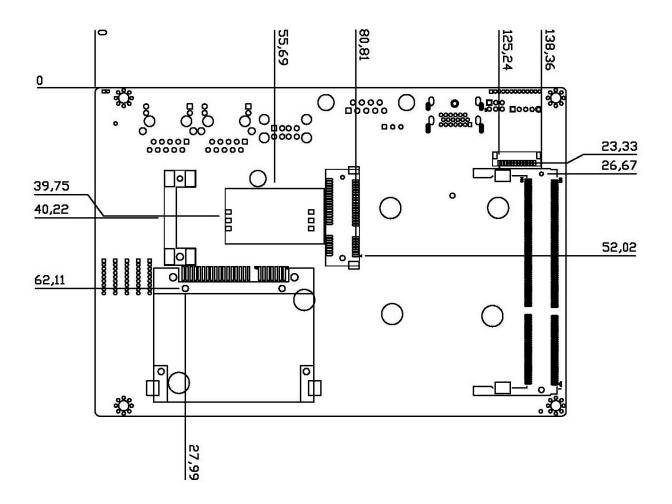

Solder Side

## 2.4 List of Jumpers

The board has a number of Jumpers that allow you to configure your system to suit your application.

Label	Function
JP1	Power pin7 for SATA DOM
JP2	Power pin7 for SATA DOM
JP3	Clear CMOS
JP4	AT/ATX Power mode
JP5	LCD Backlight Voltage Selection
JP6	LCD panel Voltage Selection
JP7	COM2 Ring/+5V/+12V Selection

#### 2.5 List of Connectors

The board has a number of Jumpers that allow you to configure your system to suit your application.
The table below shows the function of the board's connectors:


Label	Function
CN1	Front Panel
CN3	SATA connector
CN4	SATA connector
CN5	ATX 4Pin Power Connector
CN6	SATA Power Connector
CN7	Audio Connector
CN9	Speaker Connector
CN10	COM1 Connector
CN11	COM5 Connector
CN12	COM6 Connector
CN13	COM3 Connector
CN14	COM4 Connector
CN15	USB Connector
CN16	USB Connector
CN17	PS2 KB/MS Connector
CN18	LVDS Connector
CN19	FAN Connector
CN20	GIGA LAN
CN21	GIGA LAN
CN22	USB Dual Port Connector
CN24	HDMI Connector
CN25	Backlight Connector

CN26	VGA Connector
CN27	Battery Connector
CN28	COM2 Connector
CN29	CFast Connector
CN30	DDR3 Connector
CN32	Mini Card
CN33	SIM Card

#### 2.6 Setting Jumpers

You configure your card to match the needs of your application by setting jumpers. A jumper is the simplest kind of electric switch. It consists of two metal pins and a small metal clip (often protected by a plastic cover) that slides over the pins to connect them. To "close" a jumper you connect the pins with the clip.

To "open" a jumper you remove the clip. Sometimes a jumper will have three pins, labeled 1, 2 and 3. In this case you would connect either pins 1 and 2 or 2 and 3.

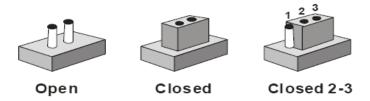

A pair of needle-nose pliers may be helpful when working with jumpers. If you have any doubts about the best hardware configuration for your application, contact your local distributor or sales representative before you make any change. Generally, you simply need a standard cable to make most connections.

#### **Pin7 Power Selection for SATA DOM**

JP1 · JP2	Function	
1-2 Closed	Pin7 with power	
1-2 Open	Pin7 without power	(Default)

## **Clear CMOS Selection**

JP3	Function	
1-2	Normal	(Default)
2-3	Clear CMOS	

## **AT/ATX Selection**

JP4	Function		
1-2 Closed	AT	(Default)	
1-2 Open	ATX		

## **LCD Backlight Voltage Selection**

JP5	Function		
1-2	+5V	(Default)	
2-3	+12V		

## **LCD Panel Voltage Selection**

JP6	Function	
1-2	+5V	
2-3	+3.3V	(Default)

## COM2 Ring/+5V/+12V Selection

JP7	Function		
1-2	+12V		
3-4	Ring	(Default)	
5-6	+5V		

## 2.7 Connector Pin Assignment

## Front Panel Connector (CN1)

Pin	Signal
1	GND
2	PWR_BTN(-)
3	HDD_LED(-)
4	+3.3V
5	Buzzer
6	+5V
7	GND

8	PWR_LED(+)
9	GND
10	Reset(-)

## **ATX 4Pin Power Connector (CN5)**

Pin	Signal	
1	NC	
2	GND	
3	GND	
4	+12V	

## **SATA Power Connector (CN6)**

Pin	Signal	
1	+12V	
2	GND	
3	GNF	
4	+5V	

## **Audio Connector (CN7)**

Pin	Signal
1 111	•
	MIC
2	MIC_VREF
3	GND
4	GND
5	LINEIN_L
6	NC
7	LINEIN_R
8	GND
9	GND
10	NC
11	LINEOUT_L
12	LINEOUT_R
13	GND
14	GND

## Speaker Connector (CN9)


Pin	Signal
1	SPK_R-
2	SPK_R+
3	SPK_L+
4	SPK_L-

# RS-232 Serial Port Connector (CN10 · CN11 · CN12 · CN13 · CN14)

Pin	Signal	
1	DCD#	
2	DSR#	
3	RXD	
4	RTS	
5	TXD	
6	CTS#	
7	DTR#	
8	RI#	
9	GND	

## **USB Connector (CN15,CN16)**

Pin	Signal	Pin	Signal
1	+5V	2	GND
3	DATA0-	4	GND
5	DATA0+	6	DATA1+
7	GND	8	DATA1-
9	GND	10	+5V

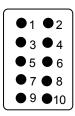

## PS2 Keyboard and Mouse Connector (CN17)

Pin	Signal
1	KBDATA
2	KBCLK
3	GND
4	+5V
5	MSDATA
6	MSCLK

## LVDS Connector (CN18)

Pin	Signal	Pin	Signal
1	LVDS_BKLEN	2	LVDS_BKLCTL
3	PPVCC	4	GND
5	LVDS_TXLCLK#	6	LVDS_TXLCLK
7	PPVCC	8	GND
9	LVDS_TXL0#	10	LVDS_TXL0
11	LVDS_TXL1#	12	LVDS_TXL1
13	LVDS_TXL2#	14	LVDS_TXL2
15	LVDS_TXL3#	16	LVDS_TXL3
17	LVDS_DDCPDATA	18	LVDS_DDCPCLK
19	LVDS_TXU0#	20	LVDS_TXU0
21	LVDS_TXU1#	22	LVDS_TXU1
23	LVDS_TXU2#	24	LVDS_TXU2
25	LVDS_TXU3#	26	LVDS_TXU3
27	PPVCC	28	GND
29	LVDS_TXUCLK#	30	LVDS_TXLCLK
		•	

## Fan Connector (CN19)

Pin	Signal
1	GND
2	Fan control
3	Fan-IN

## Backlight Connector (CN25)

Pin	Signal
1	Backlight Voltage Input
2	Backlight control
3	GND
4	GND
5	Backlight Enable

## VGA Connector (CN26)

Pin	Signal
1	VSYNC
2	HSYNC
3	GND
4	DDC_SCL
5	DDC_SDA
6	CRT_PLUG
7	BLUE
8	GND
9	GREEN
10	GND
11	RED
12	GND
13	+5V

## Battery Connector (CN27)

Pin	Signal
1	RTCBAT
2	GND

#### 3.0 AMI BIOS SETUP

## AMI BIOS Setup

AMI BIOS ROM has a built-in Setup program that allows users to modify the basic system configuration. This type of information is stored in battery-backed CMOS RAM so that it retains the Setup information when the power is turned off.

## **Entering Setup**

Power on the computer and press <Del> or <F2> immediately. This will allow you to enter Setup.

### Main

Set the date, use tab to switch between date elements.

#### Advanced

Enable disable boot option for legacy network devices.

## Chipset

host bridge parameters.

#### **Boot**

Enables/disable quiet boot option.

## Security

Set setup administrator password.

## Save&Exit


Exit system setup after saving the changes.

#### Setup 1: The Main BIOS Menu.

The sections that follow provide guidelines on how to set up the various settings in each section of the BIOS. We have concentrated only on those settings that may need changing, if a setting does not appear in this document, leave it as you found it.

Press Enter on a main menu option to go into that section.


To return to the Main Menu from within a section, press Escape.

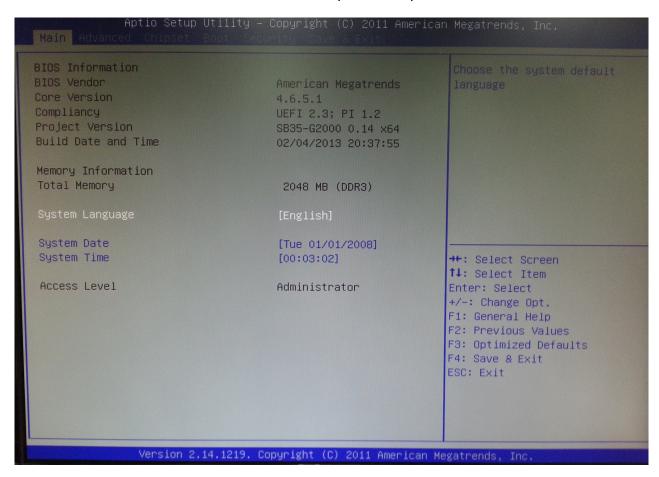

**▲The Main BIOS Menu** 

#### **Setup 2: Advanced BIOS Features**


As you can see from screen 2, there are numerous advance settings which you can select if required. For most cases leaving the default setting should be adequate.

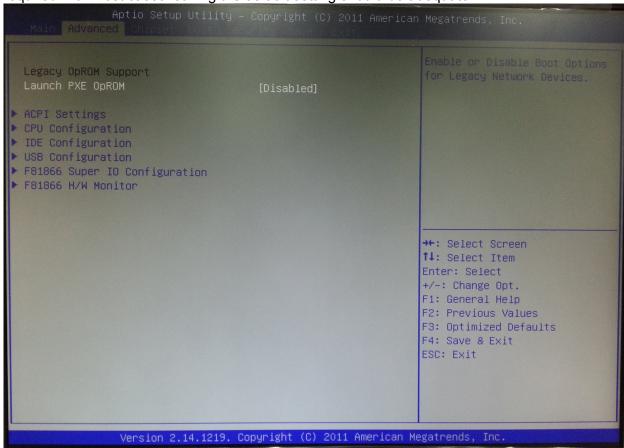

**▲** Advanced BIOS Features

#### **Setup 3: Chipset**


Here you can setup the contents of the chipset buffers. It is closely related to the hardware and is therefore recommended that you leave the default setting unless you know what you are doing. Having an incorrect setting can make your system unstable.

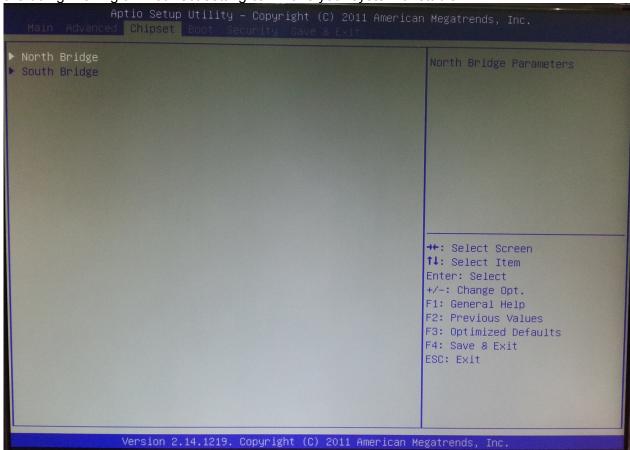

▲ Chipset

#### Setup 4: Boot


This menu allows you to set the "Boot Configuration". You can make changes as necessary.

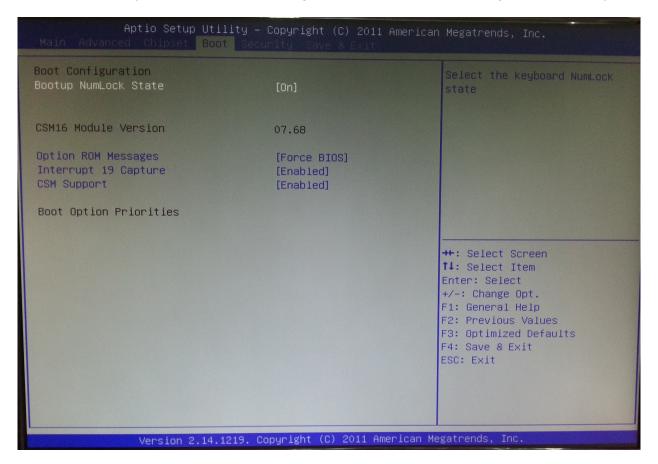

▲ Boot

#### **Setup 5: Power Management Setup**


This menu allows you to set the "Password".

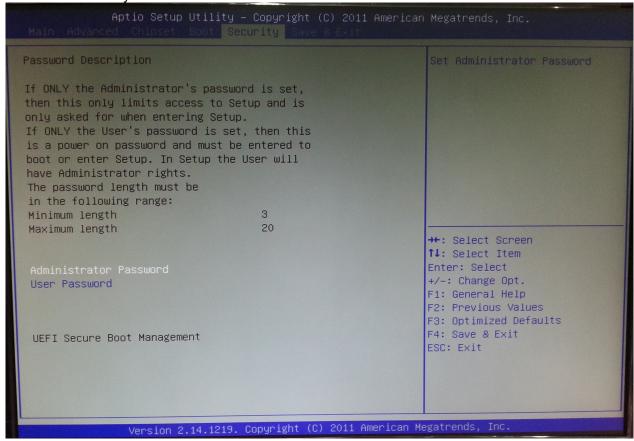

**▲ Power Management Setup** 

#### **Setup 6: Save and Exit Setup**

To save any changes you made to the BIOS you must choose this option.

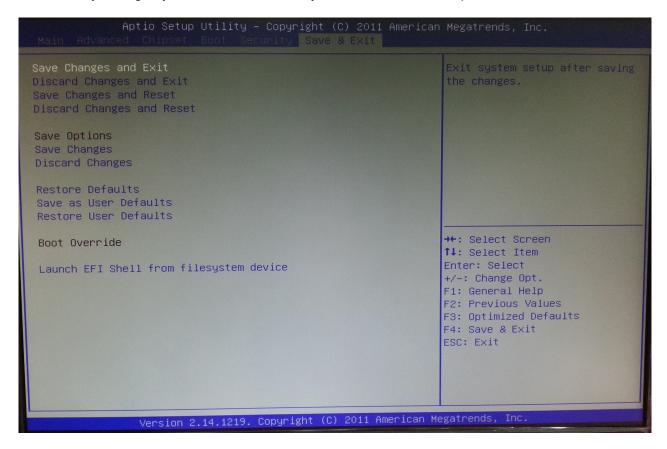

▲ Save and Exit Setup

#### 4.0 DRIVER INSTALLATION

The SB35-G2000 comes with a DVD-ROM that contains all drivers and utilities that meet your needs.

#### Follow the sequence below to install the drivers:

Step 1 – Install APU Driver

Step 2 – Install LAN Driver

Step 3 – Install Audio Driver

USB 2.0 Drivers are available for download using Windows Update for both Windows XP and Windows 2000. For additional information regarding USB 2.0 support in Windows XP and Windows 2000, please visit <a href="https://www.microsoft.com/hwdev/usb/">www.microsoft.com/hwdev/usb/</a>.

Please read instructions below for further detailed installations.

#### 4.1 Installation:

Insert the SB35-G2000 DVD-ROM into the DVD-ROM Drive. And install the drivers from Step 1 to Step 3 in order.

#### Step 1 – Install Intel APU Driver

- 1. Click on the APU Driver folder and select the OS folder your system is
- 2. Double click on the setup.exe file located in each OS folder
- 3. Follow the instructions that the window shows
- 4. The system will help you install the driver automatically

#### Step 2 – Install Intel LAN Driver

- 1. Click on the *Ethernet Driver* folder and select the OS folder your system is
- 2. Double click on the setup.exe file located in each OS folder
- 3. Follow the instructions that the window shows
- 4. The system will help you install the driver automatically

#### Step 3 – Install Audio Driver

- 1. Click on the Audio Driver folder and select the OS folder your system is
- 2. Double click on the **setup.exe** located in each OS folder
- 3. Follow the instructions that the window shows
- 4. The system will help you install the driver automatically